

Vacuum Extraction Accessory Instructions

1) Installing the accessory

The vacuum accessory mounts from under the spindle holder, with the threaded rods passing vertically up from underneath the holder and through the two holes. The threaded rods are held in place with the two M4 thumb-wheel screws, which pinch the rods in place. The hose connector mates with hosing of 32mm internal diameter, with the end of that hosing then mating with your vacuum system.

